



THE POWER OF **CONNECTED**

CX80 Snap-On Adapter

Model CX80-SN-USB, CX80-SN-SRH

Quick Start Guide

Out of the Box

Make sure that your shipping box contains these items:

- Snap-On Adapter (CX80-SN-USB or CX80-SN-SRH)
- Regulatory compliance sheet

If any of these items are missing or appear damaged, contact your Customer Account Representative. Keep the original packaging in the event that you need to return the USB Adapter for service or if you want to store the adapter while not in use.




Caution: We recommend the use of Honeywell accessories and power adapters. Use of any non-Honeywell accessories or power adapters may cause damage not covered by the warranty.

Mise en garde : Il est recommandé d'utiliser les périphériques, les cordons d'alimentation et les adaptateurs secteur conçus par Honeywell. L'utilisation de tout périphérique, cordon d'alimentation ou adaptateur secteur d'une autre marque est susceptible de provoquer des dommages non couverts par la garantie.

Connect USB Power

The USB Adapter supplies 2 A to the CX80. The operating temperature is -20 °C to 50 °C (-4 °F to 122 °F).


1. Insert the CX80 into the USB Adapter cup.
2. Plug the USB connector into the USB port on your PC.

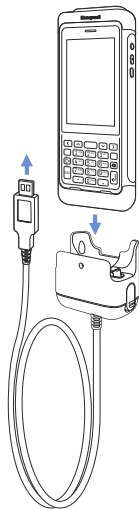

Connect Serial to USB Power

The USB Adapter supplies 2 A to the CX80. The operating temperature is -20 °C to 50 °C (-4 °F to 122 °F).

1. Insert the CX80 into the Adapter cup.
2. Plug the power connector into the power connector port.

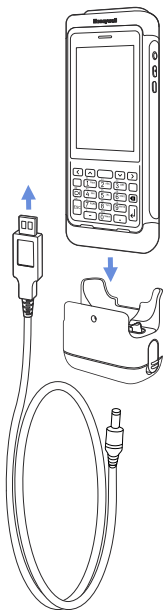

Charge the CX80



Caution: Make sure that all components are dry prior to using the computers and batteries with accessories. Using wet components may cause damage not covered by the warranty.

Mise en garde : Assurez-vous que tous les composants sont secs avant de connecter les terminaux/batteries à des périphériques. L'insertion de composants humides risque de provoquer des dommages non couverts par la garantie.

- Insert the CX80 with battery inserted into the Snap-On Adapter for at least 4 hours for a full charge.
- The Snap-On Adapter is powered by the computer's USB port, rated at 5VDC/2A, LPS, Tma 50°C.

Support

To search our knowledge base for a solution or to log into the Technical Support portal and report a problem, go to www.hsmcontactsupport.com.

User Documentation

For the user guide and other documentation, go to www.honeywellaidc.com.

Limited Warranty

For warranty information, go to www.honeywellaidc.com and click **Get Resources > Product Warranty**.

Patents

For patent information, see www.hsmpats.com.

Trademarks

Android and Google and other marks are trademarks of Google Inc.

Disclaimer

Honeywell International Inc. (“HII”) reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult HII to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of HII.

HII shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material. HII disclaims all responsibility for the selection and use of software and/or hardware to achieve intended results.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of HII.

Copyright © 2018 Honeywell International Inc. All rights reserved.