

**Honeywell**

# Enterprise Browser

for Honeywell Mobile Devices powered by Android™

---

**User Guide**

---

# Disclaimer

Honeywell International Inc. (“HII”) reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult HII to determine whether any such changes have been made. HII makes no representation or warranties regarding the information provided in this publication.

HII shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of HII.

©2021-2022 Honeywell International Inc. All rights reserved.

Android is a trademark of Google Inc.

Other product names or marks mentioned in this document may be trademarks or registered trademarks of other companies and are the property of their respective owners.

Web Address: [sps.honeywell.com](https://sps.honeywell.com)

# Patents

For patent information, please refer to [www.hsmpats.com](https://www.hsmpats.com).

# TABLE OF CONTENTS

Customer Support and Warranty .....	vii
Technical Assistance .....	vii
Product Service and Repair .....	vii
Limited Warranty .....	vii
<b>Chapter 1 - Get Started .....</b>	<b>1</b>
About Enterprise Browser for Android .....	2
Supported Mobile Devices .....	2
Limitations .....	2
Client Pack .....	3
About Enterprise Browser Licensing .....	3
About Upgrades .....	5
About Demo Licenses .....	5
How to Identify the Active License Type .....	5
About Honeywell License Manager .....	6
Install Enterprise Browser on Your Mobile Device .....	6
Start Enterprise Browser .....	7
About the Action Bar .....	8
Action Bar Features .....	8
About the Advanced Action Bar .....	9
About Multiple Browser Sessions .....	9
Show Whitelisted URL to End User .....	9
How to Exit Enterprise Browser .....	9
Exit Enterprise Browser from Multiple User Mode .....	9
Exit Enterprise Browser from Single User Mode .....	10
View the About Screen .....	10
<b>Chapter 2 - Set Up User Profiles .....</b>	<b>11</b>
Set Up User Profiles for Enterprise Browser .....	12
Start Honeywell Launcher for Android .....	12
Configure the User Profile .....	12
Configure the Whitelist .....	14
Configure Enterprise Browser to AutoRun .....	15

Reboot the Mobile Device .....	15
<b>Chapter 3 - Configure Enterprise Browser .....</b>	<b>17</b>
How to Scan Barcodes from Enterprise Browser .....	18
How to Control the SIP in HTML Pages .....	18
How to Configure Enterprise Browser .....	18
Configuration .....	19
App Cache Path .....	20
Geolocation Database Path .....	20
Enable Exit Password .....	20
Exit Password .....	20
Function Keyboard .....	21
Auto-hide Function Keys .....	21
Block Pop-ups .....	21
Load Network Images .....	21
Pull to Refresh .....	22
Media .....	22
Back Button Remap .....	22
Back Long Press Remap .....	22
Text Encoding .....	23
Enable Geolocation .....	23
Location Access .....	23
Location Mode .....	23
Clip Board Options .....	24
Enterprise Browser License Alert Keys .....	24
HomePage Button .....	25
Enable Clipboard .....	25
Security .....	25
Enable JavaScript .....	26
Do Not Track .....	26
Handle SSL Errors .....	26
Accept Cookies .....	26
Accept File Scheme Cookies .....	27
Clear Cache .....	27
Clear All .....	27
Allow File Input .....	27
Clear Cookies .....	28
Allow File Download .....	28
Appearance .....	28
Desktop View .....	29
Auto-fit Pages .....	29
Action Bar Mode .....	29

Hide System Bar .....	30
Select System Bar .....	30
User Agent String .....	30
Settings Password .....	31
Browser Orientation Mode .....	31
Allow Settings Option .....	31
Print Option .....	32
Enable Print .....	32
Resize on SoftInput .....	32
Enable Floating Button .....	32
Floating Button Orientation .....	33
Portals .....	33
Enable (Portal) .....	34
Display Name .....	34
Homepage .....	34
Enable Zoom .....	34
Zoom Controls .....	35
Initial Scale .....	35
Use Wide View Port .....	35
Min View Port Width .....	35
Text Scaling .....	36
Minimum Font Size .....	36
Default Font Size .....	36
Physical Key Map .....	36
Reload Webpage .....	37
Enable Accessibility .....	37
Physical Key Remap .....	37
Enable Custom DOM Elements .....	37
Back Key to Page .....	38
Back Key to Exit .....	38
Function Keyboard .....	38
Auto-Hide Function Keys .....	38
Advanced .....	39
Enable Enhancement .....	40
Search Engine .....	40
Whitelist URLs/ Domain .....	40
Homepage .....	41
Rule Set .....	41
Switch Portal .....	43
Enable Zoom .....	43
Zoom Controls .....	43
Text Scaling .....	43
Minimum Font Size .....	44

Default Font Size .....	44
Reload Web Page .....	44
Dynamic URL Support .....	44
Copy/Paste/Share Options .....	45
Multi-Language Support .....	45
Restore Default Settings .....	45
Enable Accessibility .....	45
Initial Scale .....	45
Wideview Portals .....	46
Min View Port Width .....	46
How to Configure Multiple Mobile Devices .....	46
Copy the HoneywellLauncher.xml File to Your PC .....	46
Copy the EnterpriseBrowser.xml File to Your PC .....	47
Configure Multiple Mobile Devices .....	47
<b>Chapter 4 - Troubleshoot Enterprise Browser .....</b>	<b>49</b>
Problems and Possible Solutions .....	50
License Errors .....	51
License Error Messages .....	51
<b>Appendix A - Miscellaneous Information .....</b>	<b>53</b>
AutoRun via HoneywellLauncher.XML File .....	54
Purchasing Licenses .....	54
Licenses of Third Party Software .....	55

# Customer Support and Warranty

## Technical Assistance

To search our knowledge base for a solution or to log in to the Technical Support portal and report a problem, go to [sps.honeywell.com](https://sps.honeywell.com).

## Product Service and Repair

Honeywell International Inc. provides service for all of its products through service centers throughout the world. Go to [sps.honeywell.com](https://sps.honeywell.com) and select Support to find a service center near you or to get a Return Material Authorization number (RMA #) before returning a product.

## Limited Warranty

For warranty information, go to [sps.honeywell.com](https://sps.honeywell.com) and select Support > Warranties.

# GET STARTED

This chapter introduces the Enterprise Browser for Android application and includes these sections:

[About Enterprise Browser for Android](#)

[Start Enterprise Browser](#)

[View the About Screen](#)



# About Enterprise Browser for Android

Enterprise Browser for Android is a locked-down enterprise Web client application designed for Honeywell Android computers. It provides a controlled Web application environment that helps enterprises increase productivity and reduce IT management expense. You can configure Enterprise Browser for your specific application requirements, and you can design your own Web applications to run through Enterprise Browser to provide your users with an easy-to-use experience.

To restrict access to a limited set of applications, use Enterprise Browser in conjunction with Honeywell Launcher for Android. Use Launcher for Android to [Set Up User Profiles](#). For more information on Launcher for Android, the Launcher for Android User Guide is available for download from the Technical Support Downloads Portal at [www.honeywellaidc.com](http://www.honeywellaidc.com). Enterprise Browser and Honeywell Launcher are installed together from the [Client Pack](#).

For samples and tips on how to program barcode readers or how to print labels and receipts, see the Honeywell SDK for Web available from <https://hsmftp.honeywell.com>.

## Supported Mobile Devices

The following mobile devices support Enterprise Browser as part of Client Pack [DCP, SCP]:

- Dolphin 75e handheld mobile device powered by Android 6.0
- Dolphin CT50 handheld mobile device powered by Android 6.0
- CK75H/CN75/CN75e handheld mobile devices powered by Android 6.0
- CN51 handheld mobile device powered by Android 6.0
- CT60/CN80/CT40 handheld mobile devices powered by Android 7.0 or higher
- CK65 handheld mobile device powered by Android 8.0 or higher
- Thor VM1A powered by Android 8.0 or higher
- Thor VM3A powered by Android 9.0
- EDA50/EDA50K/EDA60K/EDA70 powered by Android 7.0 or higher
- EDA51/EDA61K/EDA71 powered by Android 8.0 or higher
- RT10A Tablet powered by Android 9.0

The instructions in this document are for installing Enterprise Browser for Android on an Android 6.0 or later mobile device as part of Client Pack [DCP, SCP].

To install Launcher for Android on an older operating system, contact [Honeywell Technical Support](#) for instructions on downloading the correct Client Pack or .zip file.

## Limitations

For the Dolphin 75e, Enterprise Browser permits limited, locked-down functionality, but does not lock down other applications.

## Client Pack

Enterprise Browser for Android is included in the following client packs:

- **Enterprise Client Pack (ECP)**

This package contains the Honeywell Launcher, Enterprise Browser and Terminal Emulator applications. The package name starts with "ClientAppsInstall".

**Note:** The ECP package is currently deprecated and replaced with SCP and DCP.

- **Software Client Pack (SCP)**

This package contains the Honeywell Launcher, Enterprise Browser and SmartTE applications. The package name starts with "SoftwareClientPack".

- **Device Client Pack (DCP)**

This package contains Honeywell Launcher and Enterprise Browser. The package name starts with "DeviceClientPack".

**Note:** DCP for CN80G device contains Launcher and Enterprise Browser only.

## About Enterprise Browser Licensing

Using Enterprise Browser requires an application license. There are two license types for embedded software.

- **Perpetual License-** Perpetual licenses operate without expiration and require additional purchase of maintenance to receive version upgrades and tech support.
- **Term License-** Term licenses operate for a fixed period and include maintenance and tech support.

Select the suitable license depending on your requirement:

- Perpetual licenses have the potential of deploying fewer licenses; however, typically the addition of maintenance license is required at least once in the life cycle of a device.
- Term licenses provide the most functionality. They require license deployment at least once every three years. If deploying licenses over time works with your business model, then Term license is likely the best solution for you.

Starting from Q3 2020, Honeywell began pre-licensing Client Pack software on most devices with either a Perpetual or Term license.

## License Types

The different types of licenses available are:

- **Demo** Licenses provide software operation for a short period of time, typically 60 days.
- **Perpetual Licenses** operate without expiration for the software version that is authorized and include one year of maintenance. Perpetual license SKUs typically end with -001 (example: DCP-001).
- **Maintenance Licenses** provide software version upgrades and tech support for a defined period. SKUs typically end with -SFTx, where x indicates the number of years (example: DCP-SFT3). Maintenance Licenses are to be used in conjunction with Perpetual licenses.
- **Term Licenses** provide software operation, software version upgrades, and tech support for a defined period. SKUs typically end with -SFTx, where x indicates the number of years (example: DCP-SFT3). Term and Maintenance licenses are delivered via the same SKU.
- **Subscription or Software As A Service** does not require deployment of a license. The customer receives access to a connection for a defined period. Access is typically controlled through username and password.  
Example of Subscription service: Operational Intelligence

If a demo version of the Enterprise Browser application was preinstalled on your Honeywell mobile device, you need to purchase an application license to use Enterprise Browser once the demo period (60 days) has expired.

Some devices are pre-licensed with one year term. When the term ends, you must purchase a new license for the software to work.

If Enterprise Browser was not preinstalled on the mobile device, you need to install the application and purchase an application license to use Enterprise Browser once the demo period (60 days) has expired. See [Purchasing Licenses](#) for details.

If you are upgrading your mobile device from Android 4.4 to Android 6.0, you do not need to reinstall the license. The license installed for Android 4.4 will work for Android 6.0.

## About Upgrades

To upgrade Enterprise Browser on the mobile device, you must have a valid application license and an active maintenance license installed. Application licenses include one year of maintenance upgrades starting from the time the license is activated. Maintenance must be renewed before the end of the first year or before the current maintenance license expires.

## About Demo Licenses

After you install Enterprise Browser, the application runs in demo mode for 60 days, or until you purchase an application license.


After 60 days, a license expired message box appears informing you the free trial period has come to an end. Select OK to dismiss the message and close the application.

For information on purchasing and installing licenses, see [Purchasing Licenses](#).

## How to Identify the Active License Type

If a license is active on the Honeywell mobile device, you can identify the license type from the About screen in Enterprise Browser.

### To View License Information

1. Open the Enterprise Browser app.
2. Touch the  in the upper right corner.
3. Select **About**. The license type is identified in the Type field and in the extension of the Feature name.
  - a. Clientpack.d.demo  
The “.d.demo” extension indicates a demo license.
  - b. Clientpack.d  
The “.d” extension indicates a permanent application license.
  - c. Clientpack.maint.d  
The “.maint.d” extension indicates a maintenance license.

# About Honeywell License Manager

You can use the Honeywell License Manager to download and distribute your Enterprise Browser licenses.

## To Download Honeywell License Manager

1. Click on the Technical Support Downloads Portal link <https://hsmftp.honeywell.com>.
2. Create an account if you have not already created one. You must login to download the software.
3. Install the *Honeywell Download Manager* tool on your PC prior to trying to download any files. The link for the Honeywell Download Manager is located in the Note above the software tree.
4. Locate the **Honeywell License Manager** in the Software directory:  
**Software > Software and Tools > Emulator Browsers and Tools > License Manager > Current**
5. Select **Download**. Follow the prompts to download the application.
6. Refer to the License Manager online help for information on working with licenses.

# Install Enterprise Browser on Your Mobile Device

**Note:** Before attempting to download and install software, see [Supported Mobile Devices](#) and [About Enterprise Browser Licensing](#).

If the Client Pack [DCP, SCP] did not come preinstalled on the mobile device, you can download the software bundle from <https://hsmftp.honeywell.com>. The client pack is supported for Android 6.0 and later.

For a list of prerequisites for each device, refer to the software release notes.

**Note:** The mobile device must have power for the entire length of the installation process or it could become unstable. Do not attempt to remove the battery during the process.

## To Download Client Pack [DCP, SCP]

1. Click on the Technical Support Downloads Portal link, <https://hsmftp.honeywell.com>.
2. Select Software > Computer Devices.
3. Note that you will need to create an account to download any Honeywell software.
4. Create an account if you do not already have one. You must login to download the software.
5. Install the Honeywell Download Manager tool on your PC. The manager is required to download the software.
6. Select particular device in hsmftp to download the DCP/SCP Package.

7. Select the DCP/SCP software bundle for your device.
8. Select Download and follow the prompts to download the application.

**Note:** For Android version 9 and above Client Pack applications are part of OS.

### **To Install Client Pack [DCP, SCP]**

**Note:** In order to access the folder \IPSM\honeywell\autoinstall, Provisioning Mode has to be turned on.

1. Copy the Client Pack .zip file from your PC to the \IPSM\honeywell\autoinstall and/or \Internal shared storage\honeywell\autoinstall folder on the mobile device.

**Note:** If you keep the .zip file in IPSM\honeywell\persist, it will persist after enterprise reset.

2. Tap **All Apps > AutoInstall**.
  - Verify **Enable AutoInstall** has a check mark in the box.
3. Tap **Verify apps**.
  - Verify **Verify apps** has a check mark in the box.
4. Click on **Packages upgrade**.

## **Start Enterprise Browser**

**Note:** You must connect your mobile device to a wireless network before you can use Enterprise Browser.


### **To AutoRun Enterprise Browser for Android**

To run Enterprise Browser for Android (AutoRun on launch), see [AutoRun via HoneywellLauncher.XML File](#).

### **To AutoRun Enterprise Browser from Power Tools**

1. Open the **Power Tools** Application.
2. Tap **Configure AutoRun**.
3. Press and hold **Enterprise Browser**.
4. Click on **OK** when the pop up is displayed.

### **To launch Enterprise Browser for Android manually**

From the All Apps screen, tap the Enterprise Browser icon .



## About the Action Bar

Use the action bar to choose a portal, refresh the application, and change the Enterprise Browser settings.



### Action Bar Features

Icon	Feature	Description
N/A	Portal Display Name	The name of the portal currently open.
▼	Portal Selection	Lets you choose which portal you want to view if more than one portal is enabled.
☰	Whitelist	Displays a list of whitelisted URLs. Select a URL from the list to load it on the portal. (Advanced Action bar only.)
↻	Refresh	Refreshes the URL of the current active portal. You can also swipe from top to bottom (pull down) if <a href="#">Pull to Refresh</a> is enabled.
☰	Main Menu	Configures Enterprise Browser settings.

## About the Advanced Action Bar

Use the advanced action bar to type a URL in the search box, portal drop-down to switch between portals to browser or vice versa, multi-tab option to open multiple sessions, get list of URL that are whitelisted, refresh the application, and change the Enterprise Browser settings.




**Note:** The advanced action bar becomes active when the [Enable Enhancement](#) setting is turned on in Advanced settings.

## About Multiple Browser Sessions

The user can open a maximum of four (4) browser sessions and the latest four sessions will be visible in the tabs. Users can select the session to run in the forefront by touching the corresponding tab. Users can delete corresponding tab by clicking on (X) icon on right top corner of each tab. Default homepage will not be added into browser sessions.

## Show Whitelisted URL to End User

A URL whitelisted icon  is displayed on the Action bar to indicate which URLs and domains are whitelisted. When the user clicks the icon, it will pop up Whitelisted URL/domain list. When the user selects an individual URL from the list, it will be loaded on the portal. Loaded URLs will also be added to multi-tab as well.

## How to Exit Enterprise Browser

To exit Enterprise Browser, you need to log out of the application. Honeywell Launcher for Android continues to run.

The method you use depends on the user mode you want to exit from:

- [Exit Enterprise Browser from Multiple User Mode](#)
- [Exit Enterprise Browser from Single User Mode](#)

### Exit Enterprise Browser from Multiple User Mode


1. From the Main Menu, select **Log Out**.
2. When you are prompted to log out, tap **OK**. Enterprise Browser closes and the Honeywell Launcher for Android Login screen appears.



## Exit Enterprise Browser from Single User Mode

1. From the Main Menu, select **Switch User**. The Switch User screen appears.
2. Type administrator credentials to sign in to the administrator account or tap **Cancel** to return to Enterprise Browser.

## View the About Screen

Tap  and select **About**.

Information about the version number and the build date is displayed.

# SET UP USER PROFILES

This chapter discusses the user profiles and configuration of Enterprise Browser:

[Set Up User Profiles for Enterprise Browser](#)

[Configure the User Profile](#)

[Configure the Whitelist](#)

[Configure Enterprise Browser to AutoRun](#)

# Set Up User Profiles for Enterprise Browser

Create user profiles to restrict access to a limited set of applications. You need to use Honeywell Launcher for Android to set up the user profiles for Enterprise Browser for Android.

**Note:** Before you set up user profiles, make sure you do not have any applications set to AutoRun in Power Tools.

1. [Start Honeywell Launcher for Android.](#)
2. [Configure the User Profile:](#)
  - Single user, single application
  - Single user, multiple application
  - Multiple user, single application
  - Multiple user, multiple application
3. [Configure the Whitelist](#)
4. (Optional) [Configure Enterprise Browser to AutoRun.](#)
5. [Configure Enterprise Browser](#)
6. [Reboot the Mobile Device](#) if you are done configuring both Honeywell Launcher and Enterprise Browser.

## Start Honeywell Launcher for Android

When you start Honeywell Launcher for Android for the first time, you can log in as an administrator. As an administrator, you can create user profiles.

**Note:** The below configurations are made in the Launcher. See the *Launcher for Android User Guide* for more information on Launcher for Android.

1. Tap **All Apps** > **Honeywell Launcher**.
2. To enable Honeywell Launcher for Android, tap **Status**.
3. When you are prompted to enable Honeywell Launcher for Android, tap **OK**.
4. In the **User Name** field, type **admin**.
5. In the **Password** field, type **admin**.
6. Tap **Login**. You are logged in to Honeywell Launcher for Android as an administrator.

## Configure the User Profile

You can configure a user profile for a single user or multiple users. This procedure assumes you have already created your users in Honeywell Launcher for Android.


1. [Start Honeywell Launcher for Android.](#)
2. Tap  and select **Settings**.

3. From the admin Settings, tap **Application Mode** and select **Single Application Mode** or **Multiple Application Mode**.
4. Tap **User Mode** and select **Single User** or **Multiple User**.
5. Tap **Manage Users**.
  - If you have selected **Single User**, the default profile automatically opens.
  - If you have selected **Multiple User**, you need to select a user from the list to configure.
6. Set the **Permissions** you want the enable.
7. (Optional) To configure Enterprise Browser for Android to automatically run when you reboot the mobile device, select **Configure AutoRun**.

## Configure the Whitelist

Add applications to the whitelist to enable access to only specific applications on the mobile device. This feature prevents users from accidentally changing system settings and helps ensure that users stay focused and as productive as possible.

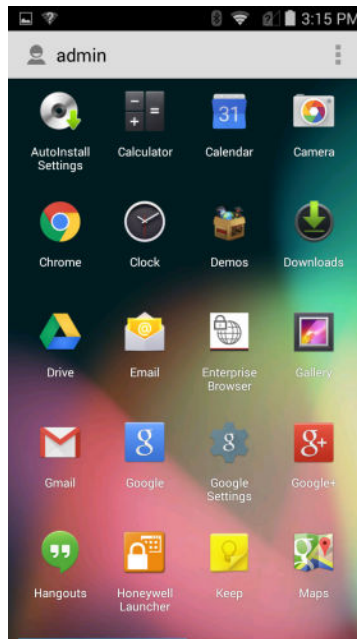

1. From the user profile **Permissions** screen, tap **Manage Application Whitelist**. The Configure White List screen appears.
2. Select the applications you want to add to the white list.  
If you are configuring the profile for a single application, only select **Enterprise Browser**.
3. To save your changes, tap **Finish**.
4. Tap Back (←) until you exit the Settings menu in Honeywell Launcher for Android. You should see this screen:



## Configure Enterprise Browser to AutoRun

You can configure Enterprise Browser to automatically start when the mobile device starts in single application mode.

**Note:** You can also follow the instructions to enable [AutoRun via HoneywellLauncher.XML File](#).

1. Configure the User Profile and select the Configure AutoRun option.
2. To log out of Honeywell Launcher for Android, tap  and select **Log Out**.
3. When you are prompted to log out, tap **OK**.
4. Log in to Honeywell Launcher for Android as the user you just configured.
5. Tap  and select **Settings**.
6. From the Settings screen, tap **Auto Run Apps**.
7. From the AutoRun Configure screen, select **Enterprise Browser**.
8. Exit the configuration screens.

## Reboot the Mobile Device

After you configure Honeywell Launcher for Android and Enterprise Browser for Android, reboot the mobile device to make sure it works as expected.

1. Press and hold the **Power** button and then select **Reboot** from the menu.
2. When prompted, tap **OK**. The mobile device reboots and opens Enterprise Browser for Android.



# CONFIGURE ENTERPRISE BROWSER

This chapter discusses the configuration of Enterprise Browser:

[How to Scan Barcodes from Enterprise Browser](#)

[How to Control the SIP in HTML Pages](#)

[How to Configure Enterprise Browser](#)

[How to Configure Multiple Mobile Devices](#)



# How to Scan Barcodes from Enterprise Browser

Enterprise Browser supports scanning from various scanners and imagers. There are two methods for scanning from Enterprise Browser. The method you use may affect how you design your web pages:

- **Wedge:** Press the scan button or pull the trigger to read a barcode. If a valid barcode is successfully decoded, the data returned is wedged into the keyboard buffer. The control with the current focus receives the data. You do not need to add unique tags or code to the HTML page.
- **Honeywell Mobility SDK:** Use a set of JavaScript interfaces to create applications. You can download the SDK from the Software tab on the mobile device product page.

# How to Control the SIP in HTML Pages

Enterprise Browser includes two JavaScript methods that let you control the behavior of the Soft Input Panel (SIP) in the HTML pages:

- `sip.show()`: shows the SIP
- `sip.hide()`: hides the SIP

Use these methods to show or hide the SIP depending on which field in your HTML page has focus. For example, if your HTML page requires typed data for an input field, use the `sip.show()` method in the `onfocus` event for that field so the SIP appears when that field has focus.

# How to Configure Enterprise Browser

Browser Settings Menu	Description
<a href="#">Configuration</a>	Configures the storage, options, and location information.
<a href="#">Security</a>	Configures the web security settings.
<a href="#">Appearance</a>	Configures the appearance of the web pages.
<a href="#">Portals</a>	Configures the settings for up to four portals.
<a href="#">Advanced</a>	Helps the user access the URL, Domain and Wild card for enhanced browsing and added search engine functionality.
<a href="#">Restore Default Settings</a>	Restores Enterprise Browser to the original default settings.

**Note:** Use the options under the Browser Settings menu to configure the Enterprise Browser.

**Note:** The settings menu is only shown when the Enterprise Browser is started from the Launcher in admin mode.

# Configuration

Configures information such as the storage paths and how information appears in Enterprise Browser. The Configuration section in Enterprise Settings includes these commands:

[App Cache Path](#)

[Geolocation Database Path](#)

[Enable Exit Password](#)

[Exit Password](#)

[Function Keyboard](#)

[Auto-hide Function Keys](#)

[Block Pop-ups](#)

[Load Network Images](#)

[Pull to Refresh](#)

[Media](#)

[Back Button Remap](#)

[Back Long Press Remap](#)

[Text Encoding](#)

[Enable Geolocation](#)

[Location Access](#)

[Location Mode](#)

[Clip Board Options](#)

[Enterprise Browser License Alert Keys](#)

[HomePage Button](#)

[Enable Clipboard](#)

## App Cache Path

Sets the path to the Application Cache files. Options for this setting are Internal or External. The internal location is predetermined and the external location is a microSD card (if installed).

### Default Setting

Internal

### XML Key

pref\_key\_storage\_app\_cache\_path

## Geolocation Database Path

Sets the path for where to save the Geolocation Databases. Options for this setting are Internal or External. The internal location is predetermined and the external location is a microSD card (if installed).

### Default Setting

Internal

### XML Key

pref\_key\_storage\_geolocation\_path

## Enable Exit Password

Users must enter an exit password to exit the Enterprise Browser. Clicking on the exit option shows the exit popup. The user must enter the correct exit password to exit.

If the back key to the exit option is enabled, pressing the back key for a long time will show the exit popup.

### Default Setting

False

### XML Key

pref\_key\_options\_exit\_pw\_enable

## Exit Password

Use this option to set the exit password when using the [Enable Exit Password](#) option.

### Default Setting

12345678

### XML Key

pref\_key\_options\_exit\_password

## Function Keyboard

This option shows the function button in the action bar. The user can show/hide the function keyboard by clicking on this button.

### **Default Setting**

False

### **XML Key**

pref\_key\_function\_keyboard

## Auto-hide Function Keys

Clicking on a function key in in the function keyboard will automatically hide the function keyboard.

### **Default Setting**

False

### **XML Key**

pref\_key\_function\_keyboard\_auto\_hide

## Block Pop-ups

Blocks whether Javascript can open windows automatically. Options for this setting are enabled or disabled.

### **Default Setting**

Disabled

### **XML Key**

pref\_key\_options\_block\_popups

## Load Network Images

Determines if images appear on the web pages. Options for this setting are enabled or disabled.

### **Default Setting**

Enabled

### **XML Key**

pref\_key\_options\_load\_network\_images

## Pull to Refresh

Determines whether swiping the screen from top to bottom refreshes the page. Options for this setting are enabled or disabled.

### Default Setting

Enabled

### XML Key

pref\_key\_options\_pull\_down\_refresh

## Media

Determines whether Browser automatically plays audio in the web page. Options for this setting are enabled and disabled.

### Default Setting

Enabled

### XML Key

pref\_key\_options\_media

## Back Button Remap

When you run Enterprise Browser without Launcher, clicking the Back button exits the Browser. Use the Back Button Remap setting to remap the Back button to go back by one page instead of exiting Browser. Options for this setting are enabled (**goes back one page**) or disabled (**exits Browser**). This setting takes effect even when Browser works with Launcher.

### Default Setting

Disabled

### XML Key

pref\_key\_back\_key\_to\_page

## Back Long Press Remap

Remaps the Back button long press to exit the browser. This setting is only available when Back Button Remap is enabled. Options for this setting are enabled and disabled.

### Default Setting

Disabled

### XML Key

pref\_key\_back\_key\_to\_exit

## Text Encoding

Sets the default text encoding to use when decoding HTML pages. Options for this setting are UTF-8, ISO-8859-1, GBK, Big5, and ISO-2022-JP.

### **Default Setting**

UTF-8

### **XML Key**

pref\_key\_options\_text\_encoding

## Enable Geolocation

Enables or disables Geolocation.

### **Default Setting**

Enabled

### **XML Key**

pref\_key\_location\_enable\_geolocation

## Location Access

Sets the permissions for how an application accesses the device location. Options for this setting are Deny Forever, Allow Forever and Prompt User.

### **Default Setting**

Prompt User

### **XML Key**

pref\_key\_location\_access

## Location Mode

Turns Google's location service on or off. You may want to turn off location services to reduce battery usage.

### **Default Setting**

On

### **XML Key**

Only allowed from the UI

## Clip Board Options

Allows Clipboard options in webpages.

### Default Setting

True

### XML Key

pref\_key\_enable\_copy\_paste

## Enterprise Browser License Alert Keys

Key	Default	Description
Maintenance Alert	True	This key is used to show maintenance due alerts for users. <b>Note: Configurable for only perpetual license.</b> Values = True or False
Preload Validity Alert	True	This key is used to show one year maintenance alerts for preloaded license. Values = True or False
License Outdated Alert	True	This key is used to show license outdated alerts for users. Values = True or False
Grace Period Alert	True	This key is used to show license validity completed alert for users. Values = True or False
Validity Completed Alert	True	This key is used to show license validity completed alert for users. Values = True or False
License Alerts for Admin	True	This key is used to show license alerts for admin (Independent of other license). Values = True or False

## HomePage Button

Set if the home button should appear on the action bar.

### Values

True or False

### Default Setting

False

## Enable Clipboard

This setting is used to enable or disable the copy-paste option.

### Values

True or False

### Default Setting

True

## Security

Configures the Webview security settings. The Security section in Enterprise Settings includes these settings:

[Enable JavaScript](#)

[Do Not Track](#)

[Handle SSL Errors](#)

[Accept Cookies](#)

[Accept File Scheme Cookies](#)

[Clear Cache](#)

[Clear All](#)

[Allow File Input](#)

[Clear Cookies](#)

[Allow File Download](#)



## Enable JavaScript

Enables or disables support for JavaScript.

### **Default Setting**

Enabled

### **XML Key**

pref\_key\_security\_javascript

## Do Not Track

Enable or disable the Do Not Track setting. When enabled, web sites and advertisers are not supposed to track and store any information without permission.

### **Default Setting**

Disabled

### **XML Key**

pref\_key\_security\_do\_not\_track

## Handle SSL Errors

Sets how SSL certificate errors are handled on a web page. Options for this setting are Deny Forever, Allow Forever, and Prompt User.

### **Default Setting**

Prompt User

### **XML Key**

pref\_key\_security\_handle\_ssl\_errors

## Accept Cookies

Sets whether or not to accept cookies. Options for this setting are enabled or disabled.

### **Default Setting**

Enabled

### **XML Key**

pref\_key\_cookies\_history\_accept

## Accept File Scheme Cookies

Sets whether or not to accept cookies for the file scheme URLs. Options for this setting are enabled or disabled.

### **Default Setting**

Enabled

### **XML Key**

pref\_key\_cookies\_history\_accept\_file\_scheme

## Clear Cache

Clears the cache on start of Enterprise Browser.

### **Default Setting**

False

### **XML Key**

pref\_key\_clear\_cache\_on\_start

## Clear All

Clears all of the browser's cookies and history. Options are **OK** and **Cancel**.

### **XML Key**

Only UI

## Allow File Input

Allows users to upload files from device to web pages when file input is required.

### **Values**

True or False

### **Default Setting**

False

### **XML Key**

pref\_key\_allow\_file\_input

## Clear Cookies

Clears the cookies on the start of Enterprise Browser.

### Values

True or False

### Default Setting

False

### XML Key

pref\_key\_clear\_cookies\_on\_start

## Allow File Download

Allows users to download files from web pages.

### Values

True or False

### Default Setting

False

## Appearance

Configures the appearance of the web pages.

[Desktop View](#)

[Auto-fit Pages](#)

[Action Bar Mode](#)

[Hide System Bar](#)

[Select System Bar](#)

[User Agent String](#)

[Settings Password](#)

[Browser Orientation Mode](#)

[Allow Settings Option](#)

[Print Option](#)

[Enable Print](#)

[Resize on SoftInput](#)

[Enable Floating Button](#)

[Floating Button Orientation](#)

## Desktop View

Enables or disables the ability to view the desktop version of web pages. Mobile versions of the web pages are requested by default.

### Default Setting

Disabled

### XML Key

pref\_key\_appearance\_desktop\_view

## Auto-fit Pages

Enables or disables whether the web pages automatically scale to fit the width of the display screen.

### Default Setting

Enabled

### XML Key

pref\_key\_appearance\_auto\_fit\_pages

## Action Bar Mode

Configures the action bar (Dolphin 75e only) so that it is hidden, visible, or only visible when you swipe the screen.

### Action Bar Modes

State	Description
Show	The action bar is visible.
Hide	The action bar is hidden. The operator cannot make the action bar visible.
Swipe	The action bar is hidden. Swipe the action bar icon ( ) in the upper left to show the action bar. Swipe the action bar to hide it.

### Default Setting

Show

### XML Key

pref\_key\_appearance\_bar\_mode

### See Also

[About the Action Bar](#)

## Hide System Bar

By setting this option to True, Enterprise Browser can hide the navigation bar, system bar, or both.

### Default Setting

False

### XML Key

pref\_key\_full\_screen\_mode

## Select System Bar

Enterprise Browser hides the navigation bar, system bar, or both by configuring values 1, 2 and 3.

1. Navigation bar
2. Status bar
3. Both

**Note:** The Select System Bar is applicable only when the Hide System Bar is enabled.

### Default Setting

1

### XML Key

pref\_key\_systembar\_remove\_mode

## User Agent String

This setting is used to configure the User Agent String to load the web pages.

**Note:** If no value is entered, then the browser will pick the default AgentString.

### Default Setting

Blank

### Values

String

### XML Key

pref\_key\_user\_agent\_string

### Example

"Mozilla/5.0 (Linux; Android 4.0.4; Galaxy Nexus Build/IMM76B)

AppleWebKit/535.19 (KHTML, like Gecko)

Chrome/18.0.1025.133 Mobile Safari/535.19"

## Settings Password

Use this option to modify the Settings Password.

### Values

String

### Default Setting

cr52401

### XML Key

pref\_key\_settings\_pw

## Browser Orientation Mode

Use this option to choose between the orientation modes for the Enterprise Browser.

### Values

0- Works according to the auto rotate option on the device.

1-Works according to the sensor, even if auto rotate option is disabled.

2-Portrait

3-Right Landscape

4-Left Landscape

### Default Setting

0

### XML Key

pref\_key\_browser\_orientation\_mode

## Allow Settings Option

When used as stand alone, provides Settings Option in the browser menu. Click on the Settings Option and enter the password when prompted on the screen. This setting is used to enable Settings Options for Non-Admin users.

### Values

True or False

### Default Setting

False

### XML Key

pref\_key\_menu\_setting\_option\_enable

## Print Option

Provides Print Option in the browser menu. Click on the Print option to print any content from web page.

### **Default Setting**

False

### **XML Key**

pref\_key\_print\_option\_enable

## Enable Print

This setting is used to enable Printing options.

### **Values**

True or False

### **Default Setting**

False

## Resize on SoftInput

This setting is used to adjust or resize the web pages according to the SoftInput keyboard.

### **Values**

True or False

### **Default Setting**

True

## Enable Floating Button

This setting is used to enable floating button in portals.

### **Values**

True or False

### **Default Setting**

False

## Floating Button Orientation

This setting is used to enable Floating Button Orientation in portals.

**Note:** The user can enable the Floating Button Orientation.

### Values

0-Horizontal

1-Vertical

### Default Setting

0

## Portals

A portal is comparable to a tab in a desktop browser. Portals provide independent views of web pages and allow a user to have multiple web applications open simultaneously. You can define up four portals. Use these settings to configure each portal you want to use:

[Enable \(Portal\)](#)

[Display Name](#)

[Homepage](#)

[Enable Zoom](#)

[Zoom Controls](#)

[Initial Scale](#)

[Use Wide View Port](#)

[Min View Port Width](#)

[Text Scaling](#)

[Minimum Font Size](#)

[Default Font Size](#)

[Physical Key Map](#)

[Reload Webpage](#)

[Enable Accessibility](#)

[Physical Key Remap](#)

[Enable Custom DOM Elements](#)

[Back Key to Page](#)

[Back Key to Exit](#)



[Function Keyboard](#)

[Auto-Hide Function Keys](#)

## Enable (Portal)

Enable or disable portal two through four. Portal one is always enabled.

### Default Setting

Enabled

### XML Key

pref\_key\_portal\_<no>\_enabled

## Display Name

A user friendly name to identify the web portal.

### Default Setting

Portal (#)

### XML Key

pref\_key\_portal\_<no>\_name

## Homepage

Sets the start page for the portal.

### Default Setting

file:///android\_asset/portalOneHome.html

file:///android\_asset/portalTwoHome.html

file:///android\_asset/portalThreeHome.html

file:///android\_asset/portalFourHome.html

### XML Key

pref\_key\_portal\_<no>\_homepage

## Enable Zoom

Enables or disables the ability to zoom in or out in the portal.

### Default Setting

Enabled

### XML Key

pref\_key\_portal\_<no>\_accessibility\_zoom

## Zoom Controls

Zoom Control enables on-screen zoom controls for a particular portal in Enterprise Browser. Zoom Controls work only if the [Enable Zoom](#) option is enabled.

### Default Setting

True

### XML Key

pref\_key\_portal\_<no>\_enable\_zoom\_controls

## Initial Scale

Initial scaling helps desktop pages fit into the Enterprise Browser screen.

### Default Setting

False

### XML Key

pref\_key\_portal\_<no>\_initial\_scale

## Use Wide View Port

By setting this value to True, Enterprise Browser takes the width from the web page meta-tags. If the value is set to False, the web page width will be equal to the screen width. If this option is disabled, then [Initial Scale](#) will be also disabled.

### Default Setting

True

### XML Key

pref\_key\_portal\_<no>\_use\_wide\_viewport

## Min View Port Width

This option helps to set the web page to a constant zoom level in a portal. This option can only be used when [Use Wide View Port](#) is disabled.

### Default Setting

220

### XML Key

pref\_key\_portal\_<no>\_min\_viewport\_width

## Text Scaling

Sets the text size scaling while still retaining the formatting of the rest of the web page. Values for this setting range from 50 to 200 percent.

### **Default Setting**

100

### **XML Key**

pref\_key\_portal\_<no>\_text\_size\_text\_scaling

## Minimum Font Size

Sets the minimum font size. Values for this setting range from 1 to 24 points.

### **Default Setting**

1

### **XML Key**

pref\_key\_portal\_<no>\_text\_size\_text\_minimum

## Default Font Size

Sets the default font size. Values for this setting range from 1 to 72 points.

### **Default Setting**

16

### **XML Key**

pref\_key\_portal\_<no>\_text\_size\_text\_default

## Physical Key Map

You can map function keys on the device to different portals and launch the portals using those function keys.

**Note:** Applicable only to devices with physical keyboard.

### **Default Setting**

Blank

### **XML Key**

pref\_key\_portal\_one\_physical\_keymap

## Reload Webpage

This setting is used to reload the web pages on network connection.

### Values

0-Never

1-Network Connected

2-Internet Connected

### Default Setting

0

## Enable Accessibility

This setting is used to enable the pinch and zoom options.

### Values

True or False

### Default Setting

True

## Physical Key Remap

This setting is used to map the portal with physical key in the device.

**Note:** User can map to Portal 1, Portal 2, Portal 3, Portal 4 and Advance Portal.

### Values

F1 to F24

No default value for this setting.

## Enable Custom DOM Elements

This setting is used for injecting one or more DOM elements (i.e JavaScript or CSS or meta tags) into a running application without modifying the underlying application. DOM elements are stored in a file resident on the device. DOM elements are case sensitive.

### Values

True or False

### Default Setting

False

## Back Key to Page

The user must press the Remap Back button to return to the previous web page.

### Values

True or False

### Default Setting

False

## Back Key to Exit

The user must long press the Remap Back button to exit the browser.

### Values

True or False

### Default Setting

False

## Function Keyboard

This setting is used to show Function button in the action bar.

### Values

True or False

### Default Setting

False

## Auto-Hide Function Keys

This setting is used to hide function Keyboard on clicking a Function button.

### Values

True or False

### Default Setting

False

# Advanced

Advanced Settings help the user access the URL, Domain, and Wildcard for enhanced browsing and added search engine functionality.

The following can be used to configure the Advanced Settings:

[Enable Enhancement](#)

[Search Engine](#)

[Whitelist URLs/ Domain](#)

[Homepage](#)

[Rule Set](#)

[Switch Portal](#)

[Enable Zoom](#)

[Zoom Controls](#)

[Text Scaling](#)

[Minimum Font Size](#)

[Default Font Size](#)

[Reload Web Page](#)

[Dynamic URL Support](#)

[Copy/Paste/Share Options](#)

[Multi-Language Support](#)

[Restore Default Settings](#)

[Enable Accessibility](#)

[Initial Scale](#)

[Wideview Portals](#)

[Min View Port Width](#)

## Enable Enhancement

Provides the ability in the configuration stage to select to enable or disable browsing. When enabled, other attributes (Search Engine, Whitelist URLs/ Domain, Homepage, Switch portal, allow internet access) will also be enabled. If this option is disabled, then only user will get access for browsing.

### Default Setting

Disabled

### XML Key

pref\_key\_enhancement\_enable\_enhancement

## Search Engine

Provides four search engines (Google, Yahoo, Bing and None) for browsing.

**Note:** If the search engine is set to "None", the device will not allow browsing the internet on the device.

### Default Setting

Google

### XML Key

pref\_key\_storage\_search\_engine

## Whitelist URLs/ Domain

An administrator can add a URL as whitelisted in three ways:

- Whole URL: need to add whole URL (example: <https://www.honeywellaidc.com>) as a rule to get access.
- Domain: need to add domain (example: [honeywellaidc.com](https://www.honeywellaidc.com)) as a rule so that all URLs related to that domain will get access.
- Wildcard: a symbol such as ‘%’ can be placed at the end of a rule to allow for all characters after the last letter in the rule to be allowed.

For example: a rule indicated as “<https://honeywellsps.my.salesforce.com/a%>” would allow all URLs starting with “<https://honeywellsps.my.salesforce.com/a>” to be accessible. Enforcement of this rule would allow for users to access:

1. <https://honeywellsps.my.salesforce.com/a2mA0000000Ujuy>
2. <https://honeywellsps.my.salesforce.com/a2mA0000000Ujuy>
3. <https://honeywellsps.my.salesforce.com/a5mX0000000Zjun>
4. <https://honeywellsps.my.salesforce.com/a7mV00002390Xjuf>
5. <https://honeywellsps.my.salesforce.com/a7mV00002390Xjuf>

Whereas the following URLs would be blocked:

1. https://honeywellsps.my.salesforce.com/b2mA0000000Ujuy
2. https://honeywellsps.my.salesforce.com/v2mA0000000Ujuy
3. https://honeywellsps.my.salesforce.com/L5mX0000000Zjun

Delete or modify URL:

URL rule implemented first then domain rule applied. If URL is not allowed but the domain is, then the domain rule is applied and access is allowed.

### **XML Key**

pref\_key\_whitelist\_URL\_Domain

## **Homepage**

Set homepage URL already whitelisted.

### **Default Setting**

file:///android\_asset/enhancementHome.html

### **XML Key**

pref\_key\_enhancement\_homepage

## **Rule Set**

The Rule Set contains all the possible rules that the customer defines related to Whitelisting URLs and Domain Names.

Example:

```
<Section name="Rules">
  <Depends Default="Hide">
    <DependsField name="../pref_key_enhancement_enable_      enhancement"
      RelOp="EQ" Value="true" Display="Show"/>
  </Depends>
  <Section name="s1">
    <Key name="pref_wifi">true</Key>
    <Key name="pref_mobile_data">>false</Key>
    <Key name="pref_rule_urls">honeywellaidc</Key>
    <Key name="pref_rule_days">Mon, Tue, Wed, Thu, Fri</Key>
    <Key name="pref_rule_time">09:00-18:00</Key>
  </Section>
</Section>
```



**Note:** Rule Name is a unique identifier and once an administrator creates a Rule Set, the user cannot update the Rule Name.

One rule (Whitelisted URLs) comes under only one Rule Set. An administrator can Create, Modify, and Delete Rule Set.

Creating a Rule Set options:

Features	Description
Rule Name	Set Rule Name (requires unique identifier)
Mobile Data	Enable/Disable WiFi ( <b>default: Enable</b> )
Select URLs (whitelisted)	Selection of URLs as a rule whitelisted
Days	Selection of Days ( <b>default: all days selected</b> )
Timing	Selection of Timing. An Administrator can select multiple time ranges ( <b>default: no time range selected</b> )

Example: If <https://www.honeywellaidc.com> comes under a certain Rule Set, it will check the following parameter:

1. WiFi: If WiFi network is active and “WiFi” option is enabled, then it will allow access to that URL; otherwise, it will be blocked.
2. Mobile Data: If Mobile data network is active and “Mobile Data” option is enabled then it will allow access to that URL, otherwise blocked.
3. Days: URL will be accessible on selected days only.
4. Time: URL will be accessible during the selected time range, otherwise blocked.

**Note:** If no time range is selected, the URL will be accessible at any time.

With Edit Rule Set, the user can edit all fields except Rule Name as it is unique identifier.

The user can delete Rule Set as well. If there is no Rule Set created, “Edit Rule” and “Delete Rule” will be disabled.

If there is no leftover Whitelisted URL, then “Create Rule” will be disabled.

If there is no Whitelisted URL present, then “Rule” will be disabled in state and vice-versa.

If Default Homepage comes under a certain Rule Set, then it follows all Rule Set conditions loads. If a URL is restricted because of Rule Set, it will show (file:///android\_asset/enhancementHome.html) as homepage.

## Switch Portal

Enables or disables portal options with URL whitelisting.

### **Default Setting**

Disabled

### **XML Key**

pref\_key\_switch\_portals

## Enable Zoom

Enables or disables the ability to zoom in or out.

### **Default Setting**

Enabled

### **XML Key**

pref\_key\_enhancement\_accessibility\_zoom

## Zoom Controls

Accessibility to use standard Android zoom control to zoom in or out.

### **Default Setting**

Enabled

### **XML Key**

pref\_key\_enhancement\_enable\_zoom\_controls

## Text Scaling

Sets the text size scaling while still running the formatting of the rest of the web page. Values for the setting range from 50 to 200 percent.

### **Default Setting**

100

### **XML Key**

pref\_key\_portal\_<no>\_text\_size\_text\_scaling

## Minimum Font Size

Sets the minimum font size. Values for this setting range from 1 to 24 points.

### **Default Setting**

1

### **XML Key**

pref\_key\_enhancement\_text\_size\_text\_minimum

## Default Font Size

Sets the default font size. Values from this setting range from 1 to 72 points

### **Default Setting**

16

### **XML Key**

pref\_key\_enhancement\_text\_size\_text\_default

## Reload Web Page

Web page will reload when internet connectivity is available and provides three options (Never, Network Connected, Internet Connected).

An error message is displayed on the screen when the device is out of network coverage area and the web page will reload automatically when the network is available.

**Note:** No need of refresh option to check network availability.

### **Default Setting**

Never

### **XML Key**

pref\_key\_portal\_<pno>\_auto\_reload

## Dynamic URL Support

Dynamic URL support is triggered when the device tries to access an unauthorized URL, i.e., a URL not on the whitelist.

An error message will pop up on trying to open the URL. An option to view all URLs on the whitelist will also be made available.

## Copy/Paste/Share Options

Although the device is very similar in function to any other Android device, the response to certain gestures is different from that of other Android devices.

The Copy, Paste, and Share options will not work the same way as on other Android devices, i.e., the Copy, Paste, and Share options will not be available upon long press on the screen of the device.

## Multi-Language Support

The Enterprise Browser has a set of different languages in which the user can interact with the device. The list of languages available are:

Spanish, German, French, Thai, Bahasa Malaya.

The language in which user prefers to interact with in the Browser must be set on the device first.

## Restore Default Settings

Reverts the settings of Enterprise Browser back to the default values. Options for this setting are **OK** and **Cancel**.

## Enable Accessibility

This setting is used to enable the pinch and zoom options.

### Values

True or False

### Default Setting

True

## Initial Scale

This setting is used to enable setting desktop pages to fit into the browser screen.

### Values

True or False

### Default Setting

False

## Wideview Portals

This setting is used to enable Enterprise Browser to take parameters from web page meta-tags.

### Values

True or False

### Default Setting

True

## Min View Port Width

This setting is used to set the web page to a constant zoom level in portal.

### Values

Integer

### Default Setting

220

# How to Configure Multiple Mobile Devices

After you configure all users for a device (as an administrator), you can export the configuration file to configure other devices.


To use the configuration file to configure other mobile computers, you need to:

[Copy the HoneywellLauncher.xml File to Your PC.](#)

[Copy the EnterpriseBrowser.xml File to Your PC.](#)

[Configure Multiple Mobile Devices.](#)

## Copy the HoneywellLauncher.xml File to Your PC

1. Configure Honeywell Launcher for Android on your mobile device.
2. [Start Enterprise Browser.](#)
3. To save the .xml file to your computer, tap  and tap **Export Configuration**. The .xml file is saved to the /sdcard/honeywellLauncher folder.
4. Turn off Honeywell Launcher for Android.
5. Connect the mobile device to your PC with a USB cable.
6. On your mobile device, set USB preferences to **File Transfer**.
7. On your PC, browse to \Internal shared storage\HoneywellLauncher\ and copy HoneywellLauncher.xml to your PC.

## Copy the EnterpriseBrowser.xml File to Your PC

Use Power Tools to generate the EnterpriseBrowser.xml file.

1. On the mobile device, run **Power Tools > EZConfig**.
2. Click the menu on the top left corner and select **Generator**.
  - If this is the first time Enterprise Browser has been launched, the xml file is automatically created and there is no need to generate the xml file.
3. Configure Enterprise Browser on your mobile device
4. Connect the mobile device to your PC with a USB cable.
5. On your mobile device, turn on USB storage.
6. On your PC, browse to `IPSM/honeywell/ezconfig/generated/` and copy EnterpriseBrowser.xml to your PC.

## Configure Multiple Mobile Devices

You can create bar codes with the EZConfig Editor or copy the HoneywellLauncher.xml and EnterpriseBrowser.xml files to other mobile computers to configure multiple computers.

If you are copying the HoneywellLauncher.xml and EnterpriseBrowser.xml file to a mobile device, you need to copy it to the persist folder. If you have not scanned an EZConfig barcode with your mobile device, you need to manually create the persist folder. The persist folder does not appear until you scan an EZConfig barcode.

1. Connect the mobile device to your PC with a USB cable.
2. On your mobile device, turn on USB storage.
3. Copy the HoneywellLauncher.xml and EnterpriseBrowser.xml files to your PC.
4. Open the .xml files in the EZConfig Editor.
5. Edit the files and save them or generate EZConfig bar codes.
6. Use one of these methods to configure other mobile computers that have Honeywell Launcher for Android installed:
  - Scan the EZConfig bar codes generated from the EZConfig Editor.
  - Settings scanned from an EZConfig barcode are persistent. You can update the settings by scanning a new barcode or by deleting the EnterpriseBrowser.xml file from these two locations:
    - Mobile device (CT50 or 75E)\IPSM\honeywell\persist\
    - Mobile device (CT50 or 75E)\Internal storage\honeywell\persist\
  - For ADB, copy the HoneywellLauncher.xml and EnterpriseBrowser.xml file to `/sdcard/honeywell/persist`. If the persist folder does not exist, you need to create it.

- For File Explorer, copy the HoneywellLauncher.xml and EnterpriseBrowser.xml file to /internal storage/honeywell/persist.

7. Restart the mobile device.

# TROUBLESHOOT ENTERPRISE BROWSER

Use these tables to try to resolve issues you may encounter while using Enterprise Browser:

[Problems and Possible Solutions](#)

[License Errors](#)


For further help contact [Customer Support and Warranty](#).



# Problems and Possible Solutions

Use the next table to find possible solutions for problems you may encounter while using Enterprise Browser.

Problem	Possible Solution
When I start Enterprise Browser, the "wait" cursor appears and a web page never appears.	Make sure that the mobile device is properly configured to connect to the network. For help, see the mobile device user manual.
My web pages do not look the same on Enterprise Browser as they do on my desktop PC.	Make sure that you have designed your Web content for use with mobile devices, particularly the smaller screen size.
Without proper configuration, it is possible for the user to escape during the reboot sequence.	To prevent the user from being able to escape the application during the reboot sequence, make sure to configure these two settings: <ul style="list-style-type: none"> <li>• <b>AutoInstall Settings &gt; Disable</b> (clear the check-box)</li> <li>• <b>Settings &gt; Security &gt; Screen lock &gt; None</b></li> </ul>
When I start Enterprise Browser, this error message appears: A Wireless network is not currently available.	Enterprise Browser checks to make sure that the Honeywell mobile device has network access before starting up. Try these possible solutions: <ul style="list-style-type: none"> <li>• Make sure that the wireless radio has good signal strength.</li> <li>• Make sure that the mobile device is properly configured to connect to the network. For help, see the mobile device user manual.</li> </ul>
I cold booted the mobile device and Bluetooth does not seem to be set up correctly.	There was a problem with the installation. Please contact <a href="#">Customer Support and Warranty</a> .
Only one instance of Enterprise Browser can be started.	Enterprise Browser only supports one instance. However, you can access up to four web portals.
The postamble is set to \n\t, but focus does not move to the next field after scanning a barcode.	Some mobile computers may not support \n\t. Use \r\t instead.
The Mobile device stops functioning properly and this screen appears:	Tap <b>User Mode</b> , and then tap <b>Always</b> .

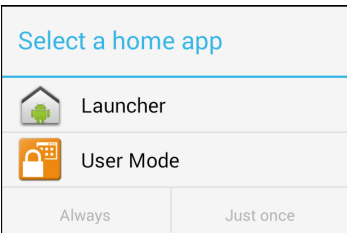Problem	Possible Solution
	

### See Also

Contact [Customer Support and Warranty](#)

## License Errors

When a license error occurs, a license error message containing an error code appears on the Enterprise Browser screen.

This list contains all possible license errors for Enterprise Browser. Each error has a unique error code and a brief description. If an error occurs that is not included in this list, please contact [Customer Support and Warranty](#).

## License Error Messages

Error Message	Description
SUCCESS = 0	Request was successful.
ERROR_LICENSE_NOT_FOUND = -1	Requested license not found.
ERROR_LICENSE_EXPIRED = -2	License found, but expired.
ERROR_OLD_LICENSE_VERSION = -3	License exists, but is older than the software requesting the license.
ERROR_NO_SERVICE = -100	Communication with the LicenseService failed.
ERROR_LICENSE_MANAGER_UNAVAILABLE = -101	LicenseManager could not be created.
ERROR_UNKNOWN = -1000	An unspecified internal error occurred.

### See Also

[About Enterprise Browser Licensing](#)



# MISCELLANEOUS INFORMATION

This appendix contains miscellaneous information for Enterprise Browser:

[AutoRun via HoneywellLauncher.XML File](#)

[Purchasing Licenses](#)

[Licenses of Third Party Software](#)

# AutoRun via HoneywellLauncher.XML File

**Note:** Refer to Launcher for Android for HoneywellLauncher.xml

You can save the .xml file to your PC and then copy it to your mobile device to configure Enterprise Browser to AutoRun.

1. View the document in Adobe Acrobat. It may be necessary to save the document to your mobile device and open it outside of a web browser with Adobe Acrobat.
2. Find the file, **HoneywellLauncher.xml** in Launcher for Android.
3. Right-click on the file name and select **Save Attachment**.
4. Browse to a location on your PC where you wish to save the file.
5. Copy the file to your mobile device to enable AutoRun.

## Purchasing Licenses

You can obtain licenses for Enterprise Browser through normal Honeywell sales channels. Once the appropriate license has been ordered, the person named on the purchase order will receive an entitlement email from ACSHSMLicense@Honeywell.com. You need the Activation ID from this email to download your licenses.

To download licenses and add them to your devices:

1. If you have not installed the Honeywell License Manager application, download and install it on your PC. See [About Honeywell License Manager](#) for instructions.
2. Start License Manager on your PC.
  - a. Download the licenses to your PC.
  - b. Register your devices with License Manager.
  - c. Assign licenses to individual devices in a License Bundle.
  - d. Export the License Bundle to an .xml file. A single license bundle .xml file can contain multiple device/license pairs.

**Note:** Refer to the License Manager online help for additional information.

3. Use any method of your choice to copy the license bundle .xml file to the \sdcard folder on your mobile devices. The licensing utility on the mobile device consumes the license bundle .xml file (the file disappears).

Once the license bundle .xml file has been read, the license has been installed, and you are ready to run Enterprise Browser.

# Licenses of Third Party Software

This product contains software provided by third parties, which may include the below listed components. The Honeywell product that includes this file does not necessarily use all of the third party software components referred to below.

.. contents::

Package(s) using Apache v2.0 license

=====

\* Android Support Library

Copyright (C) 2014 The Android Open Source Project

License Text Apache v2.0 license

-----

Apache License

Version 2.0, January 2004

<http://www.apache.org/licenses/>

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

Definitions.

“License” shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

“Licensor” shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

“Legal Entity” shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, “control” means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

“You” (or “Your”) shall mean an individual or Legal Entity exercising permissions granted by this License.

“Source” form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

“Object” form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

“Work” shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

“Derivative Works” shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

“Contribution” shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, “submitted” means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as “Not a Contribution.”

“Contributor” shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

Grant of Copyright License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.

Grant of Patent License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.

Redistribution. You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:

You must give any other recipients of the Work or Derivative Works a copy of this License; and

You must cause any modified files to carry prominent notices stating that You changed the files and

You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and

If the Work includes a “NOTICE” text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

Submission of Contributions. Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.

Trademarks. This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.

Disclaimer of Warranty. Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its



Contributions) on an “AS IS” BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.

**Limitation of Liability.** In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, mobile device failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.

**Accepting Warranty or Additional Liability.** While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

## END OF TERMS AND CONDITIONS

APPENDIX: How to apply the Apache License to your work.

To apply the Apache License to your work, attach the following boilerplate notice, with the fields enclosed by brackets “[ ]” replaced with your own identifying information. (Don't include the brackets!) The text should be enclosed in the appropriate comment syntax for the file format. We also recommend that a file or class name and description of purpose be included on the same “printed page” as the copyright notice for easier identification within third-party archives.

Copyright [yyyy] [name of copyright owner]

Licensed under the Apache License, Version 2.0 (the “License”); you may not use this file except in compliance with the License. You may obtain a copy of the License at:

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an “AS IS” BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.





Honeywell  
855 S. Mint St.  
Charlotte, NC 28202

[sps.honeywell.com](http://sps.honeywell.com)